


\*TEMP Sender value @ 75°F is 550 to 750 ohm, 55 ohm @ 212°F Single. (Dual is one-half these values)

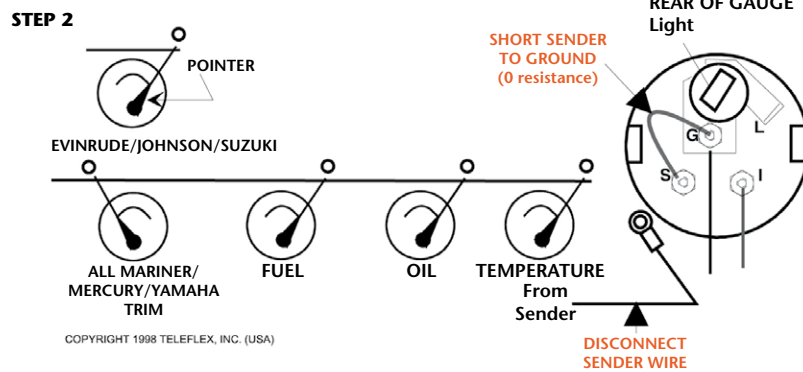

## DOES THE GAUGE WORK?

To see if the gauge is operating correctly:

1. Remove the gauge sender wire. Turn on the power. The pointer of whatever gauge you are checking should be at the position shown in the top picture.
2. Next, take a short wire and connect to sender terminal and ground terminal (shorting sender terminal to ground). The pointer of that gauge should be at the position shown in the lower picture.
3. To test senders, the resistance values are shown at minimum and full gauge scales.
4. Every Teleflex Marine gauge can be identified by the part number printed on the side of the housing. Please reference this part number when contacting technical service or replacing the original gauge.